


» GoPro Settings Cheat Sheet «

COMMON RESOLUTION OPTIONS [VARIES BASED ON CAMERA MODEL]

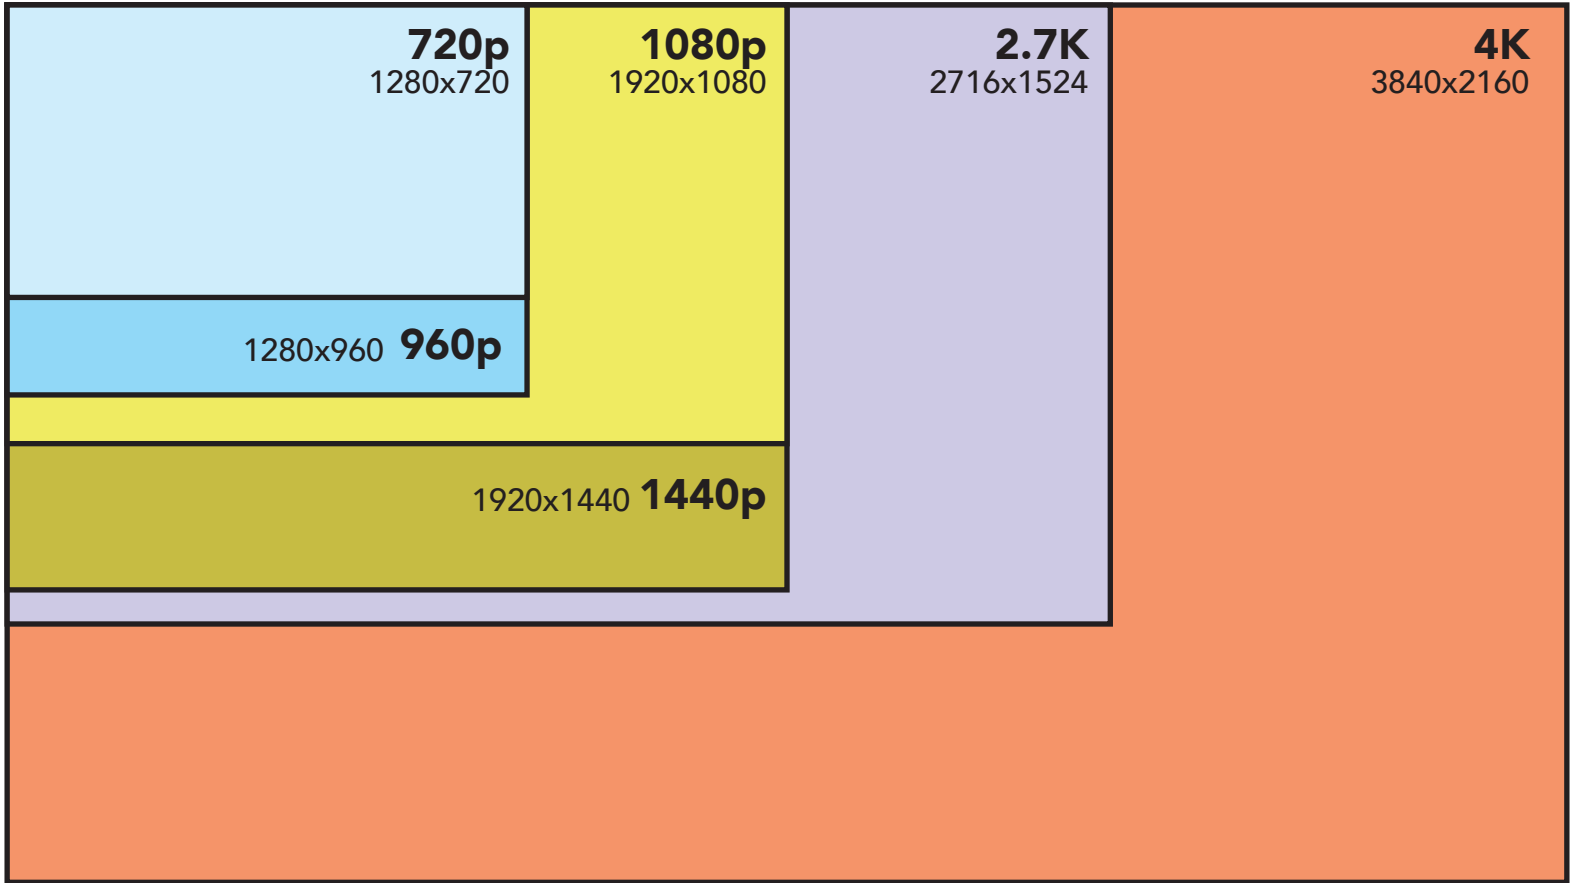

FRAME RATE [FPS]

30 fps or 60 fps are most common. When to shoot 60 or higher – when you want to do slow motion when you’re editing, shoot at a higher frame rate. [Click here for more info »](#)

FIELD OF VIEW [FOV]

The wide or ultrawide FOV will produce the greatest amount of fisheye distortion, but allows you to capture more of your surroundings. Some people like this, some don’t. Use Linear FOV to have the distortion removed automatically. [Click here for more info »](#)

PROTUNE ON OR OFF?

When Protune is OFF, your camera is in full auto mode; you don’t need to adjust white balance, color, ISO, etc. When Protune is ON, you have manual control over certain settings. If you’re new to GoPros, start with Protune OFF. [Click here for more info »](#)



Thanks for downloading this freebie! If you found it helpful, please subscribe to my YouTube channel and Like VidProMom on Facebook for more tips, tricks, tutorials and how-to’s on video editing, cameras, and other fun stuff. Join me! –Meredith
[youtube.com/gopromom](https://www.youtube.com/gopromom) [facebook.com/vidpromom](https://www.facebook.com/vidpromom)